


SAM MIX

TILE ADHESIVE
瓷磚胶灰
PELEKAT JUBIN

QUIKFIX 999
QF-999

- ✓ *Excellent adhesion*
- ✓ *Slip resistant*
- ✓ *Excellent for **CERAMIC TILES***
- ✓ *Non-toxic & non-corrosive*
- ✓ *Easy to mix and apply*
- ✓ *Excellent for **WALL RENDERING***

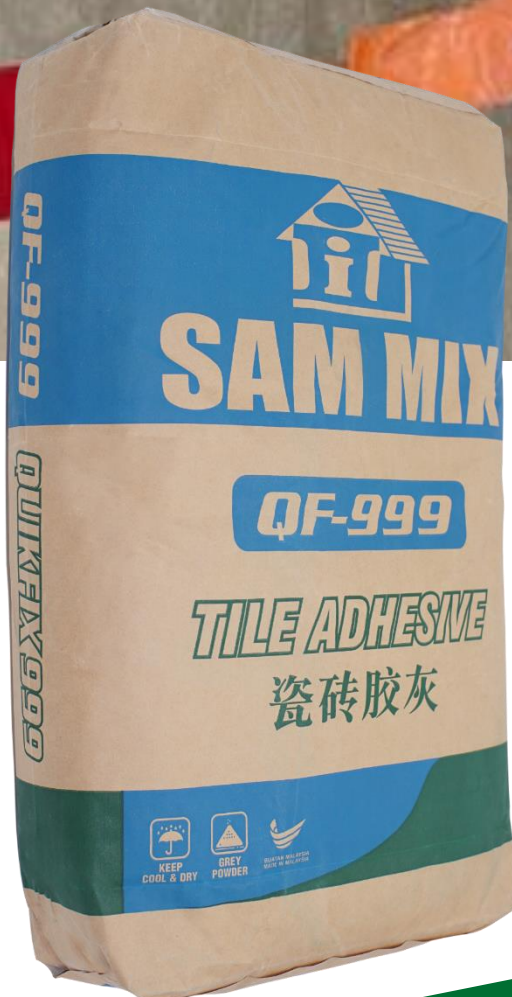

Packaging Size:
20KG / 25KG

QUIKFIX 999 (QF-999)

QUIKFIX 999 (QF-999) is a high quality polymer modified water-resistant cement-based adhesive for use as a key coat (spatter dash) for plastering on smooth concrete surfaces and fixing of ceramic floor & wall tiles. It is suitable for interior and exterior use in thin bed application (3mm to 10mm).

QUIKFIX 999 (QF-999) 是一种高品质聚合物改性防水水泥基粘合剂，用于在光滑的混凝土表面上抹灰并固定陶瓷地砖和墙砖。它适用于使用在内部和外部薄层厚度(3毫米至10毫米)。

QUIKFIX 999 (QF-999) adalah pelekat berasaskan simen tahan air yang diubah suai polimer berkualiti tinggi untuk digunakan sebagai pelapis spatter dash untuk melepa pada permukaan konkrit yang licin dan pemasangan seramik jubin lantai & dinding. Ia sesuai untuk kegunaan dalaman dan luaran dalam aplikasi nipis (3mm hingga 10mm).

Properties

Appearance	Grey powder
Binder	OPC Portland Cement
Filler	Graded silica sand and calcium carbonate powder
Auxiliaries	Additives and specialized polymers
Mix Ratio	Approx. 24% Water
Wet Density	1400 – 1450 kg/m ³
Dry Density	1250 – 1300 kg/m ³
Adjustable Time	Up to 10 minutes
Pot Life	Approx. 2 hours
Application Thickness	Up to 10mm
Coverage	1.1 KG/m ² /mm

Usage

1. Substrate must be dry, sound, flat / true & free of contaminants.
2. Ceramic Tiles are to be fix dry. Do not soak in water.
3. Latex admixture must be apply with fixing porcelain and homogeneous tiles.
4. Mix **QUIKFIX 999 (QF-999)** with water (or Latex Admixture) as per the recommended mix ratio. Mechanical mixing recommended.
5. Spread adhesive to the substrate at bed thickness of 3 - 10mm (may vary depending on tile size & thickness) with suitable notched trowel.
6. Spread no more than 1 m² at a time to avoid Skin-Over.
7. Promptly fix tiles onto adhesive bed, followed by slight twisting action to ensure good contact.
8. Touch adhesive bed periodically to check for Skin-Over. Where adhesive bed is no longer tacky/sticky, Skin-Over had occurred. Re-Trowel adhesive bed.
9. Remove surplus adhesive from tile surface & joints before it hardens.
10. Set for 24 hours; before grouting commences.